

# CD-DVD PREVIEW STATION

## CARD INSTALLATION GUIDE



In the future your CD and DVD preview systems will be updated via the internet. In the meantime they need to be updated by manually switching out the flash card.

**FLASH CARD INSERT IS LOCATED ON THE SIDE OF THE SCREEN**



Please follow the instructions below to update your Preview Systems when you get new content on a flash card.

- 1) Unplug the screen and carefully remove the flash card by pulling it straight out of its slot inside the unit.
- 2) Carefully insert the new flash card straight between the 2 guides on the circuit board as pictured.
- 3) Once the card has been inserted correctly, plug in the screen in and wait approximately 1-2 mins. for the new content to show up on the screen.



**SIDE VIEW**

**INSERT FLASH CARD AS PICTURED**



**INSERT**



**CLOSE UP**

Warning: Not inserting the flash card straight between the 2 plastic guides on the circuit board can damage the screen and void the warranty.